


# WIRED REMOTE CONTROLLER


## INSTALLER REFERENCE GUIDE

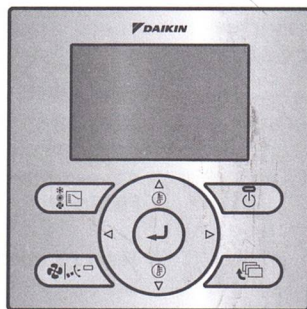

**BRC073A4**

**Be sure to read this installer reference guide  
before conducting the installation of this product.**

# Names and Functions

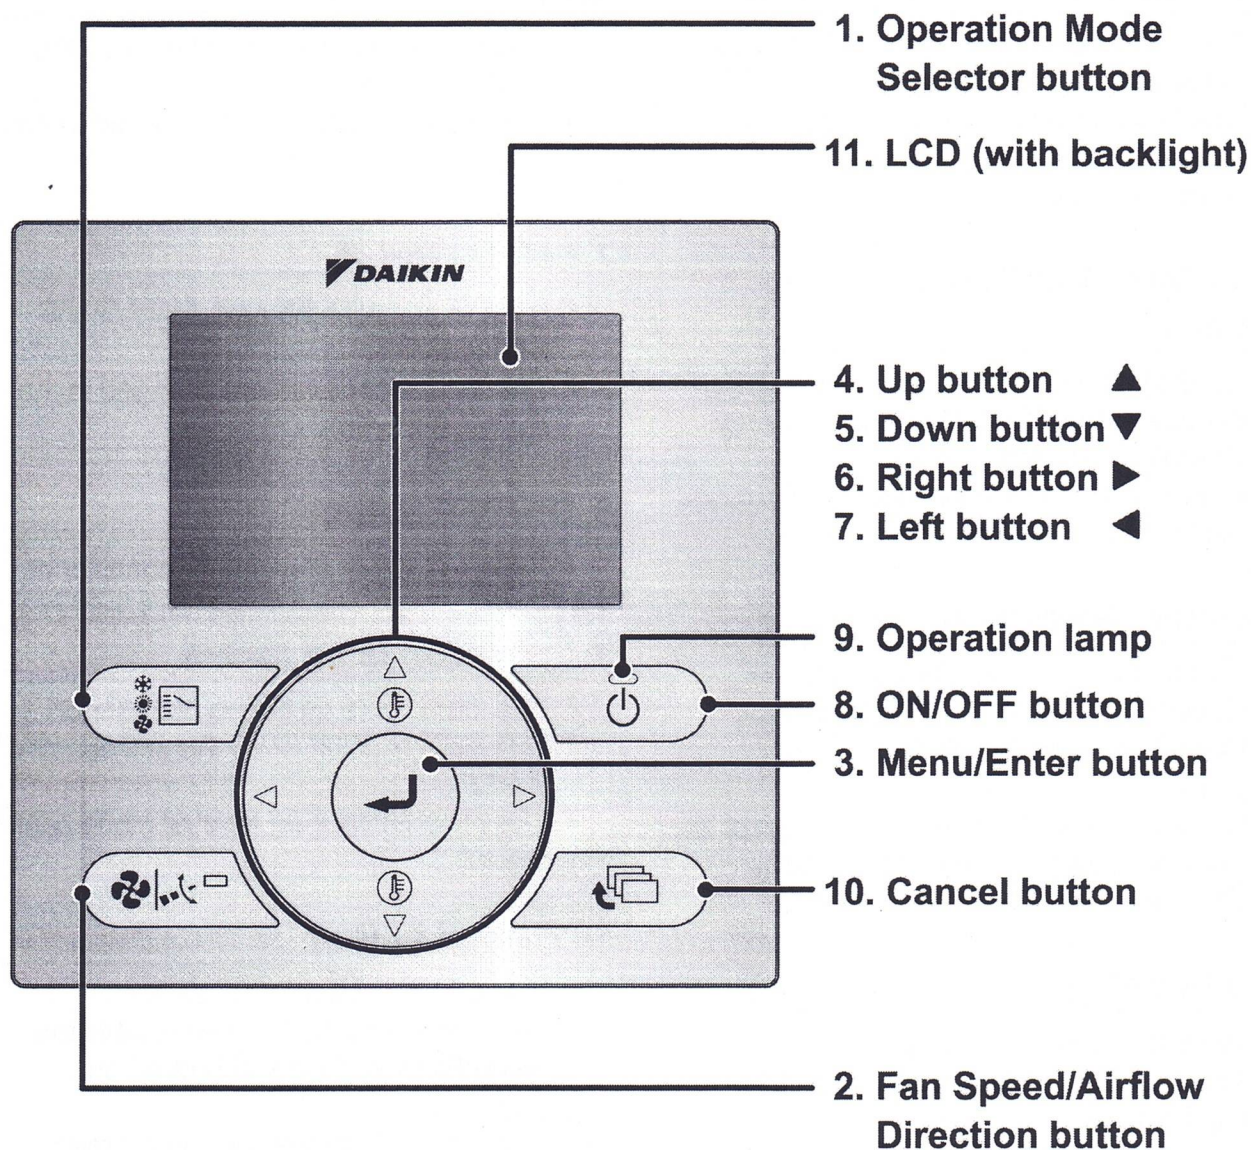

Functions other than the basic operation items (i.e., ON/OFF, operation mode selection, fan speed, up/down direction, and temperature setting) are set from the menu screen.

## NOTE

- Do not install the remote controller in places exposed to direct sunlight. Otherwise, the LCD may become discolored and nothing may be displayed.
- Do not pull or twist the remote controller cord. Otherwise, the remote controller may malfunction.
- Do not press the buttons on the remote controller with objects with sharp ends. Otherwise, the remote controller may be damaged or malfunction.

## 1. Operation Mode Selector button

---

- Press this button to select the operation mode of your preference. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 12)
- Available modes may vary with the connected model.

## 2. Fan Speed/Airflow Direction button

---

- Used to change the fan speed and airflow direction. (See "Cool/Heat/Fan/Dry/Auto Operation" on page 13)
- Available fan speeds and airflow directions may vary with the connected model.

## 3. Menu/Enter button

---

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to display the Main Menu or enter the selected item (See "Main Menu Items Overview" on page 19).

## 4. Up button ▲

---

- Used to raise the set temperature.
- The next item on the upper side will be highlighted.  
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

## 5. Down button ▼

---

- Used to lower the set temperature.
- The next item on the lower side will be highlighted.  
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

## 6. Right button ►

---

- Used to highlight the next items on the right-hand side.
- The display contents are changed to the next screen.

## 7. Left button ◀

---

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

## 8. ON/OFF button

---

- Press to start or stop the air conditioner.

## 9. Operation lamp (Green)

---

- This lamp lights up during operation.
- This lamp is not lit when the unit operation is OFF.
- This lamp blinks if an error or mode conflict occurs.

## 10. Cancel button

---

- This button is enabled by default. To disable, refer to "Enable/disable the Menu/Enter and Cancel button" on page 11.
- Used to return to the previous screen.

## 11. LCD (with backlight)

---

- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons, except for the ON/OFF button, are not carried out when the backlight is not lit.