


# WELCOME TO YOUR NEW FRANKE OVEN

You're about to begin a very happy and delicious  
relationship. Let's get started.

This is no ordinary oven.

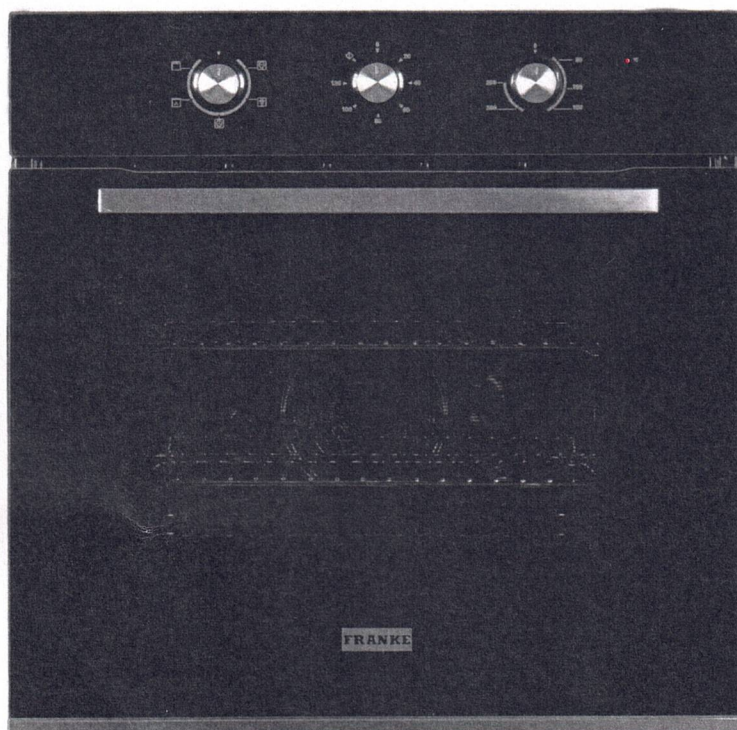

**FRE60M5B - 60CM 5 FUNCTION OVEN**

MAKE IT WONDERFUL

**FRANKE**

## OVEN FUNCTIONS



### Convection

A heating element plus fan force. This results in an even distribution of heat. Default temperature 180°C.



### Defrost

Circulation of air at room temperature to speed up thawing of frozen food.



### Light

A lamp will illuminate to display the contents of the oven. This is particularly helpful when cleaning the oven.




### Radiant Grill

The radiant heating element is maintaining temperature from the top.



### Radiant Grill with Fan Force

The inner grill element maintains the temperature together with the fan force. This is the most energy efficient setting with lightly browned on the outside, and moist on the inside.

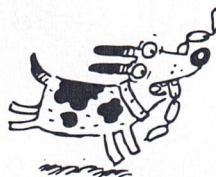

## OPERATING YOUR OVEN

To select a cooking function and choose your desired temperature:

1. Rotate the **'left knob'** to choose the cooking function.  
The various symbols represent different cooking functions.
2. Rotate the **'right knob'** to adjust the temperature to your desired pre-set.
3. Rotate the **'middle knob'** to select the amount of time required for cooking.
4. Alternatively, if no specific time is required, rotate the **'middle knob'** to the left to switch on the oven.
5. To turn off the oven, switch the **'middle knob'** to the **'0'** position.

## TIMER FUNCTION

The timer allows you to keep an eye over the amount of cooking time that has elapsed. To set a timer:

1. Rotate the **'middle knob'** to select the amount of time required for cooking.
2. Once the selected amount of time has elapsed, the oven will switch off and the buzzer will sound.

