


Basic Instructions

1. **POWER**: Turn the TV on and off.
2. **INPUT**: This button is used to switch among different sources. Select a source and press ENTER button to confirm.
3. **Digital Buttons(0-9)**: Directly select channel with digital buttons.
4. **RECALL**: Switch to the previous program.
5. **SUBTITLE** in DTV source, the button is used for subtitle language. In USB source, the button is used to set subtitle.
6. **INFO**: Display the program information.
7. **YouTube**: If network connects, press this key to view YouTube directly.
8. **HOME**: Press it to go to App home page.
9. **NETFLIX**: If network connects, press this key to view NETFLIX directly.
10. **MUTE**: Press this button to cut off the sound of the TV set temporarily, press again to resume.
11. **MENU**: Display the main menu or exit the current menu.
12. **ENTER/LIST**: Press to show channel list and favorite list on screen.
13. **Arrow buttons** ▲▼◀▶ : Use to select on-screen menu items and change menu values.
14. **BACK/GUIDE**: Display menu GUIDE in DTV mode. Return function in app.
15. **EXIT**: Exit the menu.
16. **COLOR BUTTONS**: It's used as it's show the EPG or Program Edit menu.
17. **VOL+/-**: Press these buttons to adjust the volume.
18. **CH/V**: Press these buttons to change channel upward or downward.
19. **ASPECT**: Press this button to switch the screen mode.
20. **I/II button**: In ATV source, the button is used to set NICAM sound system. In DTV source, the button is used to set the audio language.

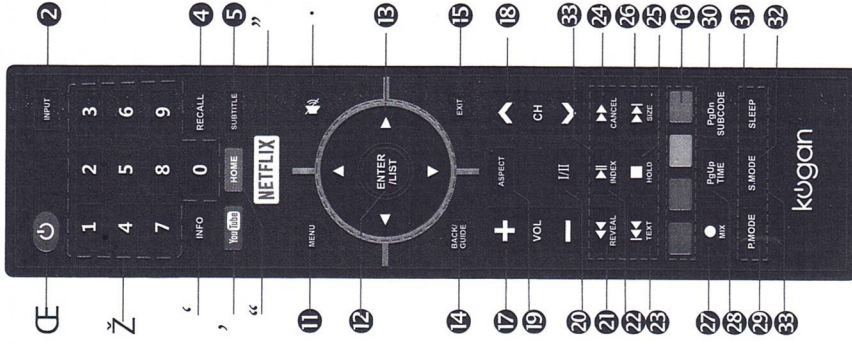

Basic Instructions

21. **REVEAL**: Pressing this button will reveal any hidden data (answers to quizzes for example). Press the REVEAL button again to return to normal screen.
22. **INDEX**: Press INDEX button, then index page displays.
23. **TEXT**: Press TEXT button to enter or exit teletext mode.
24. **CANCEL**: The CANCEL button will exit from any Teletext on the display. Press CANCEL button again to exit Teletext and return to live TV broadcast.
25. **HOLD**: Press HOLD button to toggle Hold function on or off. When Hold is switched on, the page acquisition is stopped. When Hold is switched off, the page acquisition is started.
26. **SIZE**: Press SIZE button one time to display the upper half of the screen in double height, press the SIZE button two times to display the lower half of the screen in double height, press three times to display the full screen in normal size.
27. **MIX (●)**: Teletext buttons for mix function, please refer to TX description page. It is also used for recording function when TV is on DTV mode, please refer to PVR page.
28. **TIME**: This button is used to show the time of the teletext.
29. **P.MODE**: Press this key to go to picture menu.
30. **SUBCODE**: Subcode mode gives the possibility to select certain subcode pages of a Teletext page. Entry of digits within the range 0...9 for current subcode entry. If the digit completes the entry, a page request is started. Press CH ▲ and CH ▼ buttons to change the subcode pages.
31. **SLEEP**: TV will be turn off automatically at preset sleep time if you have set sleep timer. Press this button to select sleep time among 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.
32. **S.MODE**: Press this key to go to sound menu.
33. **DIGITAL MEDIA PLAYER CONTROL BUTTON**: include play/pause, stop, previous, next, backward, forward is used in USB mode. Please refer to relevant instructions in the section of multimed player.

