 



Functions

 
Control Panel

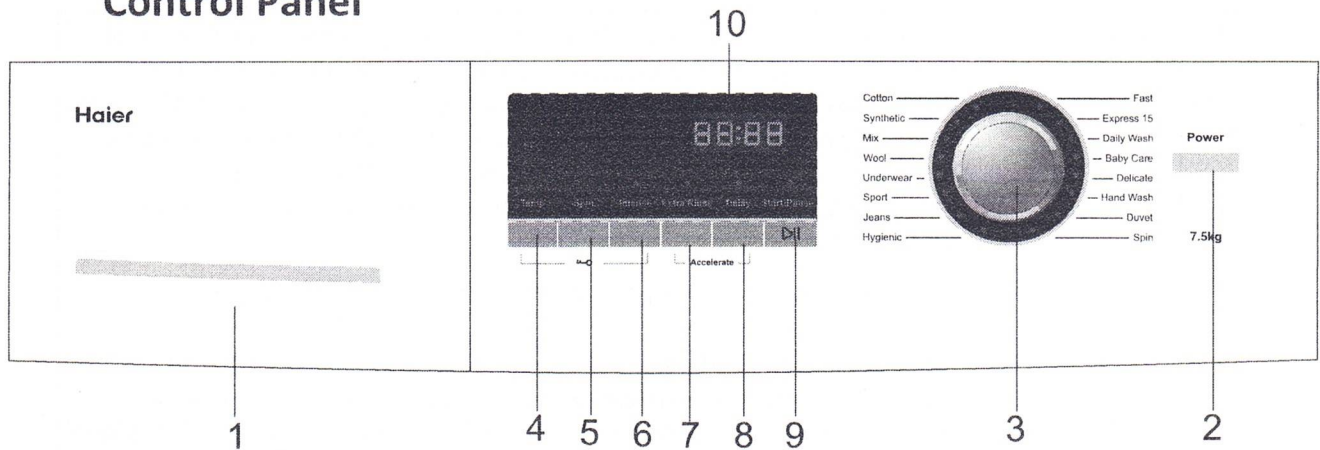




1. Detergent/Softener Drawer
2. Power Button
3. Program Dial
4. Wash Temp
5. Spin Speed
6. Intense button
7. Extra Rinse
8. Delay
9. Start/Pause Button
10. LED Display

Operational Functions

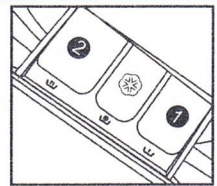Nº	Function	Explication
1	Detergent distribution drawer	<p>Open the drawer, three compartments can be seen: Compartment 1: Prewash detergent (for prewash mode). Compartment 2: Detergent for programs 1 to 15. Compartment 3: Softener, conditioning agent.</p> <p>The recommendation on the type of detergents is suitable for the various washing temperatures, please refer to the manual of detergent.</p>
2	Power Button	Press this button to switch on the washing machine. Press it again to switch it off. Press this button gently for 2 seconds to switch off the machine as buttons are soft touch sensitive.
3	Program Dial	By turning the knob clockwise/counterclockwise, the required program can be selected. There are 16 programs available. After a program is selected, the corresponding light will illuminate.
4	Wash Temp	Touch this button lightly, the washing temperature will be displayed on the indicator. Select a temperature according to the type of laundry. Note: If there is no indicator light displayed, this means cold wash.
5	Spin Speed	Touch this button lightly to select the desired speed. When a speed is set, it will be displayed on the indicator. Note: If there is no indicator light displayed, this means no spinning.
		<p> Different water temperatures and spinning speeds can be set for different laundries. Wash using the default settings if there is no special requirement.</p>
6	Intense button	If the laundry is very dirty, press this button before starting the program. When the button is pressed, the washing time increases.



- 7 Extra Rinse** Press this button, the washing machine will perform additional rinses. Press the button once to select one additional rinse. The display will show "P-1". Press the button repeatedly and the screen will display "P-2" or "P-3", indicating two or three additional selected rinses. The "extra rinse light" is activated and flashes during the performance. "P-1/2/3" is displayed alternating with the remaining time. The light turns off and the display disappears when the extra rinse ends.
-  You can select if you require this function when programs 1-15 are used.
- 8 Delay** Touch this button lightly, the washing machine will start operation after a period of time and the corresponding indicator will go on. The range is 0.5-24 hours; each touch of this button increases a half hour. After the button is set, press the Start/Pause button to start countdown of the set time (the time is displayed on the screen until the program ends).
-  The delay time must be longer than the program time otherwise the washing machine will start the wash program directly.
- 9 Start/Pause Button** When the washing machine is connected to the power socket and a program is selected, lightly touch this button to start operation. During a wash cycle, touch it lightly, operation will stop and the digits on the screen start blinking. Touch it again to resume operation. To cancel a wash program during a wash cycle, touch this button, when the digits on the screen start blinking, press the Power switch, the program will be cancelled.
- 10 LED Display** Information as remaining wash time and error messages will be shown here.
-  After a wash program is started the display will go on and the remaining wash time decreases. As the water pressure and temperature may differ, the remaining time may be adjusted accordingly. When the laundry is not balanced during spinning, the time may be automatically prolonged.

To cancel audible alarm

Alarm sound can be cancelled if it is required (not recommended)

Switch on the washing machine and turn the program knob to spin cycle, then press the "Delay" and "Extra rinse" button, hold on for 3 seconds.

The message "BEEP OFF" will be displayed on the screen, indicating that the alarm sound has been cancelled.

To reinstate audible alarm

 
Switch on the washing machine and turn the program knob to spin cycle, then press the "Delay" and "Extra rinse" button, hold on for 3 seconds. The "BEEP ON" message will be displayed on the screen, indicating that the alarm sound has been reinstated.

Accelerate Function

press extra rinse and delay at the same time for 3 seconds, then the display area shows "SPEED uP" (display 3S circularly), this function be activated. press these two button again, this "Accelerate" function will be canceled.

Functions

Program Modes

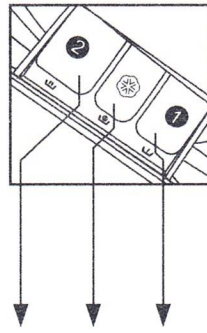

- 1 Detergent compartment for prewash mode
- 2 Detergent compartment
- 3 Compartment for softener

Programme	Temp. Max	Preset	2	3	1	Fibre Type	Preset Spin Speed	Accelerate
1 Cotton	0-90°C	30°C	✓	⊙	✗	Cotton /Synth	1400 rpm	✓
2 Synthetic	0-60°C	30°C	✓	⊙	✗	Chemical fibre fabrics	1200 rpm	✓
3 Mix	0-60°C	30°C	✓	⊙	✗	Cotton /Synth	1000 rpm	✓
4 Wool	0-40°C	---	✓	⊙	✗	Woolen fabrics	800 rpm	✗
5 Under wear	0-60°C	40°C	✓	⊙	✗	Underwear	1000 rpm	✓
6 Sport	0-40°C	20°C	✓	⊙	✗	Sports Wear	800 rpm	✗
7 Jeans	0-60°C	30°C	✓	⊙	✗	Jeans	1000 rpm	✓
8 Hygienic	90°C	90°C	✓	⊙	✗	Cotton	1000 rpm	✓
9 Fast	0-40°C	40°C	✓	⊙	✗	Cotton	1000 rpm	✗
10 Express 15	0-40°C	---	✓	⊙	✗	Cotton /Synth	1000 rpm	✗
11 Daily Wash	0-60°C	30°C	✓	⊙	✗	Cotton fabrics	1000 rpm	✓
12 Baby Care	0-90°C	40°C	✓	⊙	✗	Cotton /Synth	1000 rpm	✓
13 Delicate	0-30°C	30°C	✓	⊙	✗	Silk	800 rpm	✗
14 Hand Wash	0-30°C	30°C	✓	⊙	✗	Cotton fabrics	400 rpm	✗
15 Duvet	0-40°C	40°C	✓	⊙	✗	Cotton	800 rpm	✓
16 Spin	---	---	✗	✗	✗	---	1000 rpm	✗

Yes ✓

Optional ⊙

No ✗